


## 115V Control Voltage & 230V Motor Voltage

Note: Customer to install neutral to starter coil as shown below.

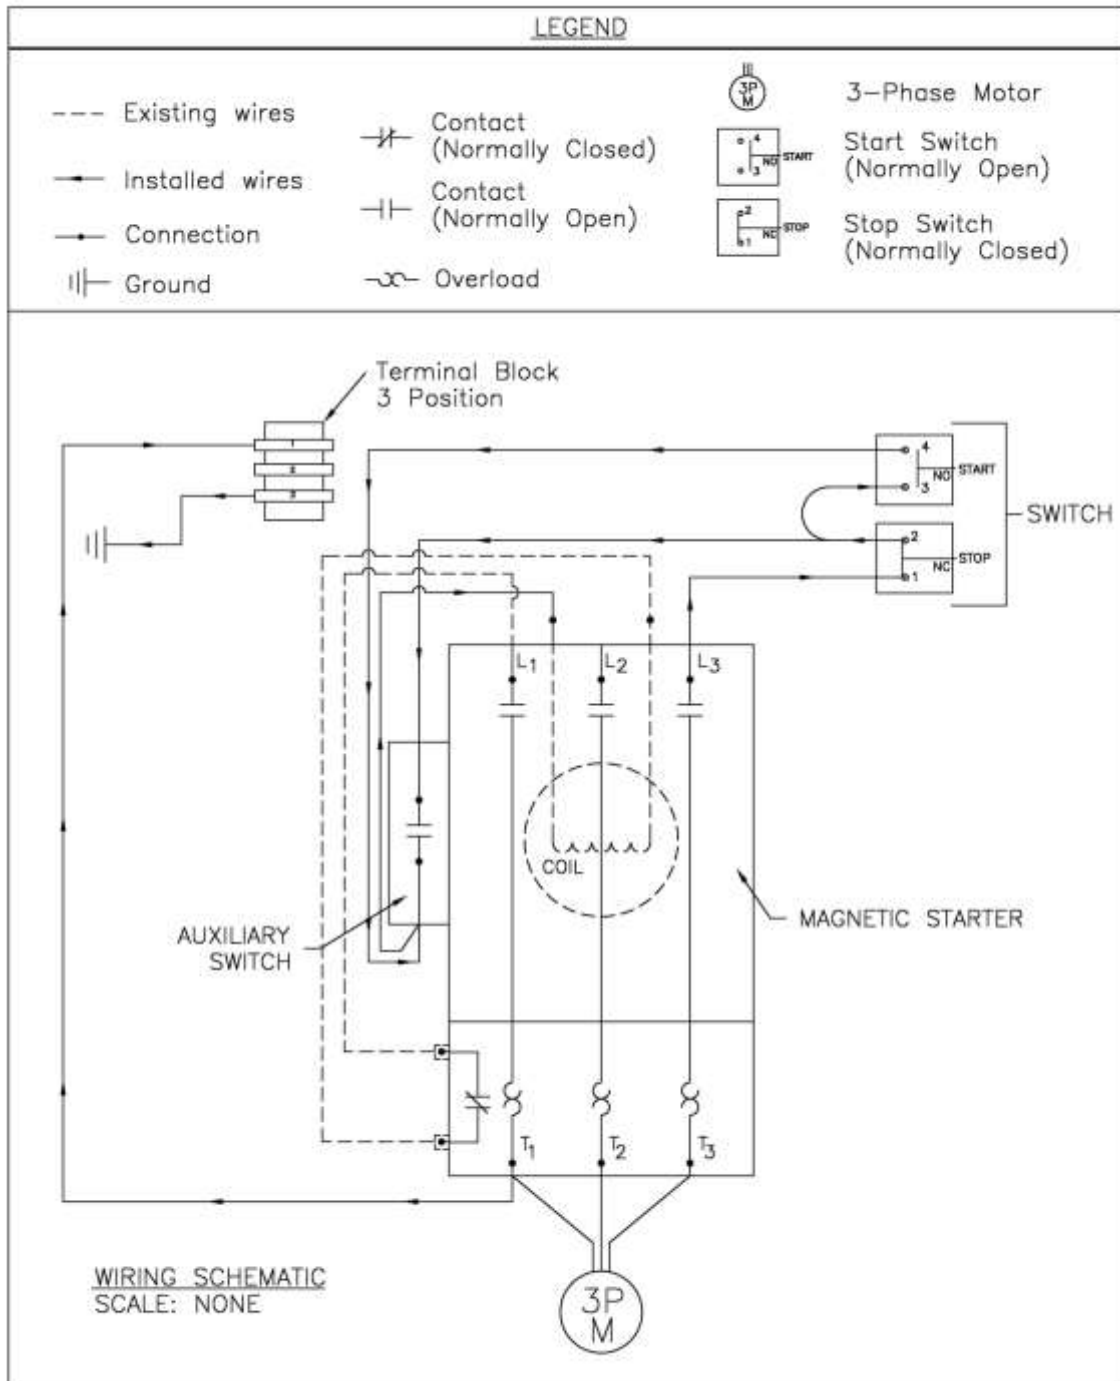

## 115V Control Voltage & 380V, 460V, 575V Motor Voltage

Note: Customer to install neutral to starter coil as shown below.

